1870941
Black Keyboard Tray
Parts List

A.	Keyboard Tray Body	1 pc
B.	Left Metal Glide System	1 pc
C.	Right Metal Glide System	1 pc
D.	Metal Bracket	4 pcs
E.	Phillips Pan Head Bolts	4 pcs
F.	Phillips Flat Head Screws	12 pcs
G.	Phillips Head Screwdriver	1 pc

* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
* Use the hardware illustrations to determine correct piece and size.
* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
* This item may require periodic tightening.

Hardware Illustrations

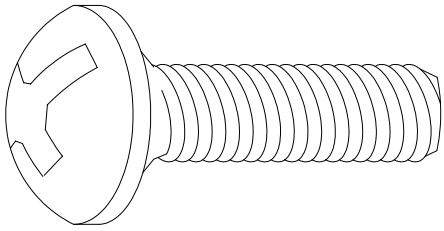

E. Phillips Pan Head Bolt

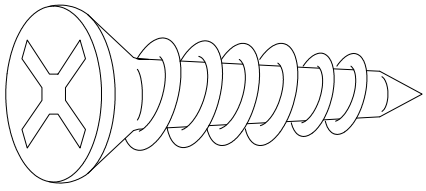

F. Phillips Flat Head Screw

1870941
Black Keyboard Tray

Attach Metal Brackets and Glide Systems

Parts required

A.	Keyboard Tray Body	1 pc	E.	Phillips Pan Head Bolts	4 pcs
B.	Left Metal Glide System	1 pc	F.	Phillips Flat Head Screws	4pcs
C.	Right Metal Glide System	1 pc	G.	Phillips Head Screwdriver	1 pc
D.	Metal Bracket	4 pcs			

1. **Attach Metal Bracket (D)** Align the desired pre-drilled holes in the long part of Metal Bracket (D) with the pre-threaded holes in the Left & Right Metal Glide Systems (B, C). Secure with Phillips Pan Head Bolts (E) using Phillips Head Screwdriver (G). See Illustration #1
2. **Attach Left & Right Metal Glide Systems (B, C)** Pull out the glides fixed Metal Brackets (D) in right direction. Make sure the pre-drilled holes in the other glides align with the pre-threaded holes in the ends of Keyboard Tray Body (A). Secure with Phillips Flat Head Screws (F) using Phillips Head Screwdriver (G). See illustration #1

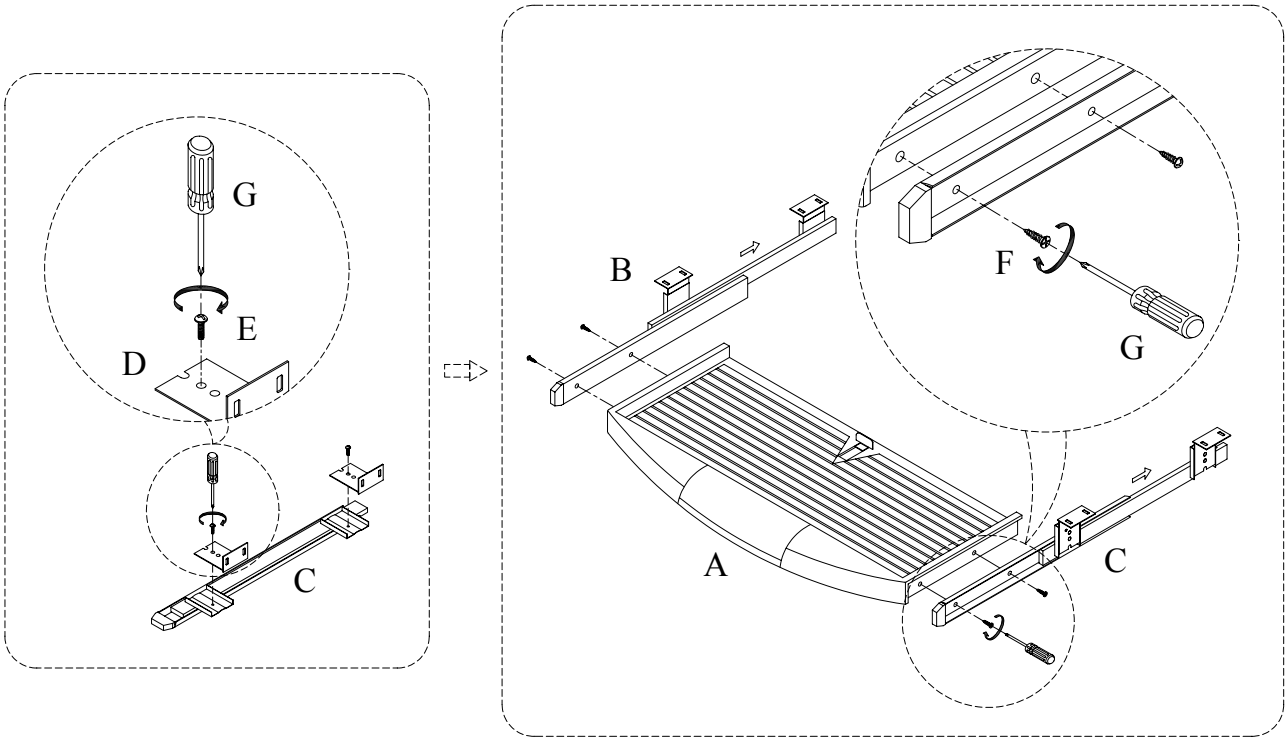

Illustration # 1

1870941
Black Keyboard Tray

Notes: This item belongs to Kids Modular Group and can be attached to the Desk Top using the instructions below.

Attach Keyboard Tray

Parts required

D.	Metal Bracket	4 pcs	G.	Phillips Head Screwdriver	1 pc
F.	Phillips Flat Head Screws	8 pcs			

3. **Attach Keyboard Tray** Place desk top upside down on a soft surface. Turn the keyboard tray face down and align the pre-drilled holes in the short part of Metal Bracket (D) with the pre-threaded holes in the desk top. Secure with Phillips Flat Head Screws (F) using Phillips Head Screwdriver (G). See Illustration #2

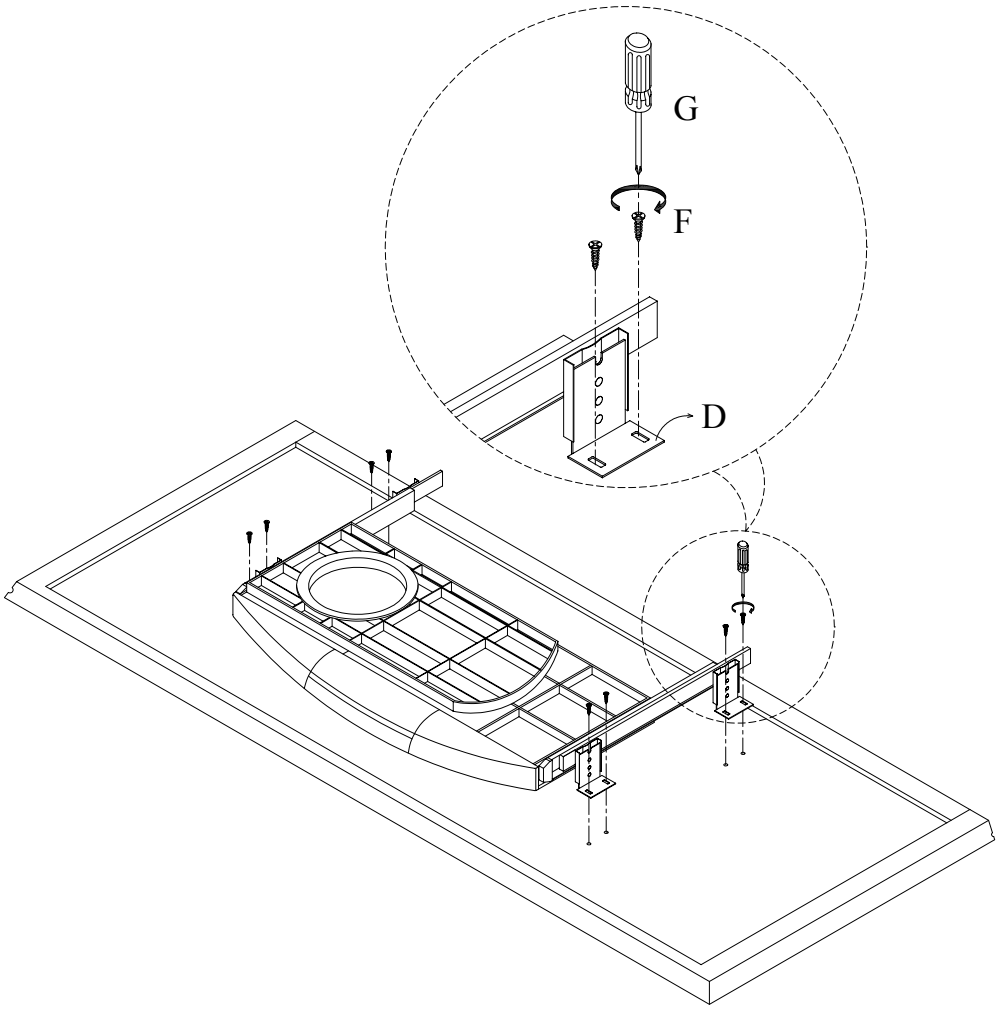

Illustration # 2